



DFT
AUTOGATE OPERATOR
X1+



DFT
AUTOGATE OPERATOR
X2



DFT
AUTOGATE OPERATOR
X4



DFT
AUTOGATE OPERATOR
X5

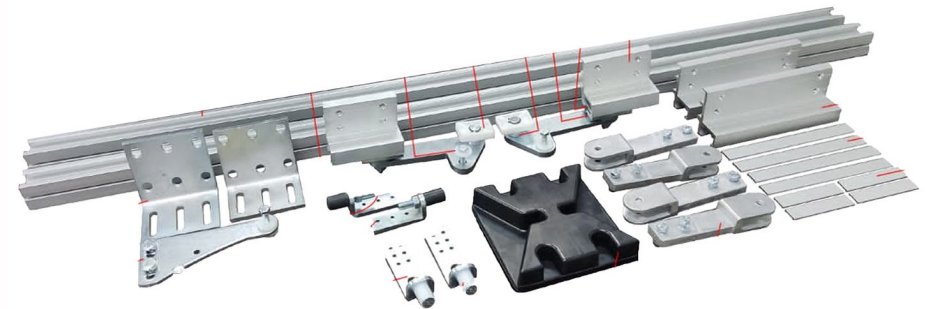
DFT

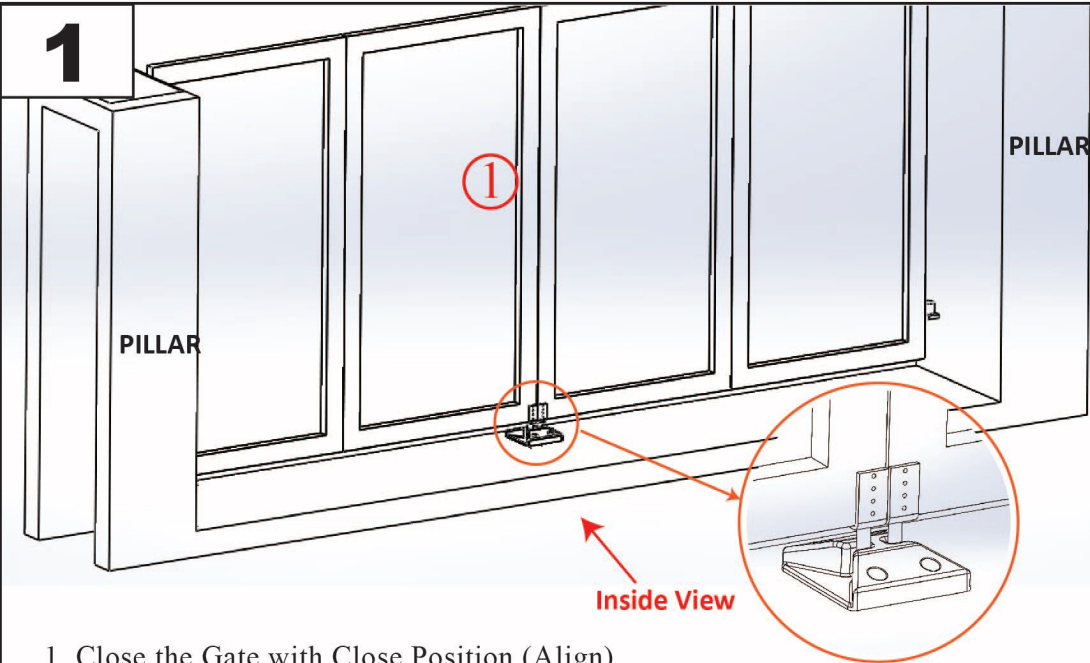
AUTOGATE OPERATOR

INSTALLATION MANUAL

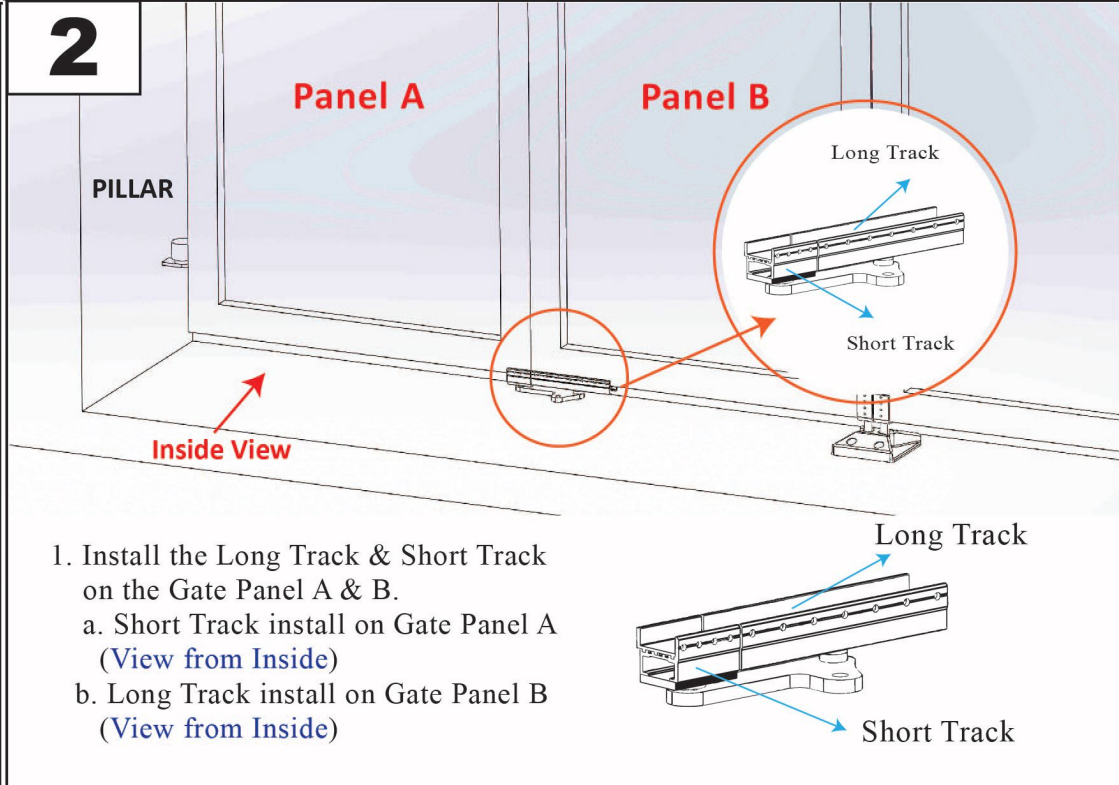
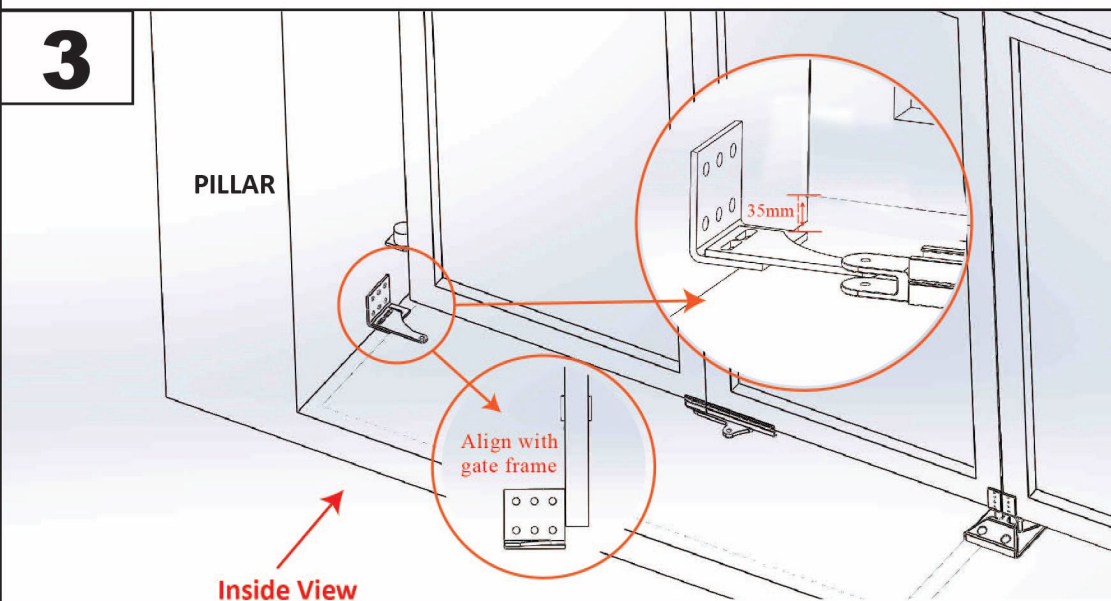
5-TL

**FOLDING OUT
TRACKLESS AUTO GATE SYSTEM
WITH KIT**

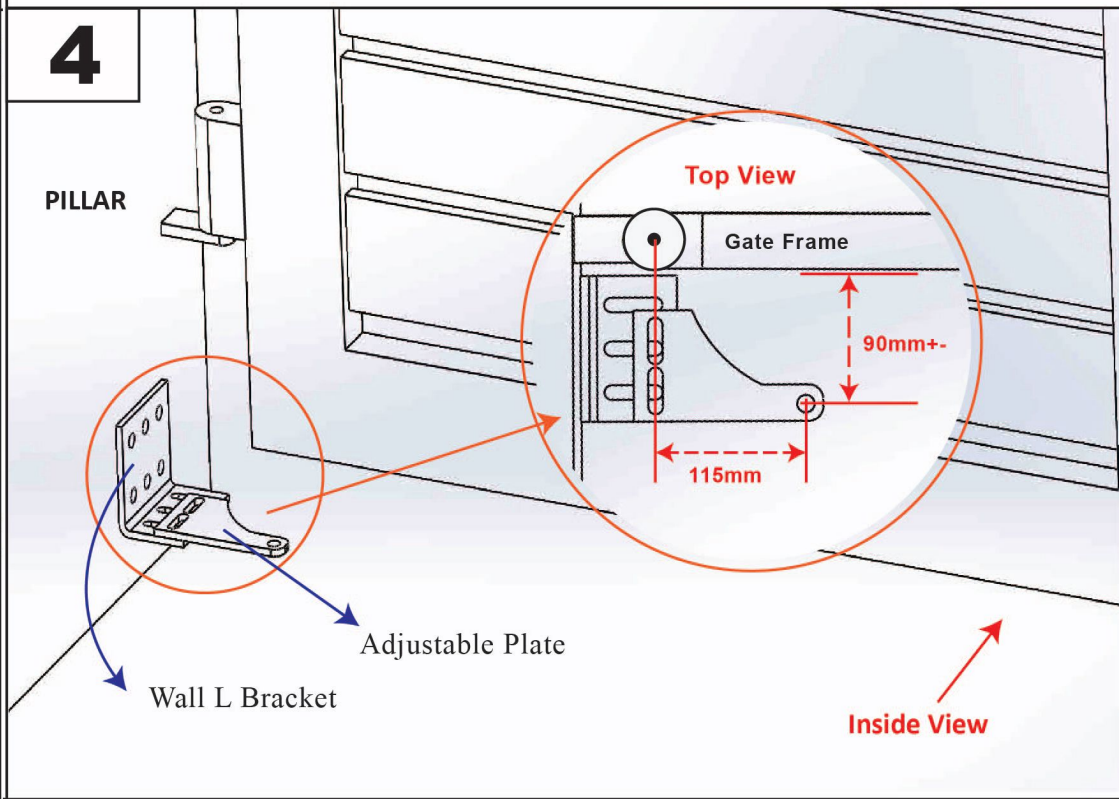


1

1. Close the Gate with Close Position (Align)
2. Install Stopper
3. Install and Adjust the Stopper Pin height level.

2**3**

1. Align the Wall bracket with gate frame.
2. Measure the gate bottom frame with bracket distance and install the Bracket.

4

5**Panel A****Panel B****PILLAR****LONG BAR**

Adjustable Join

25mm Adjust

Fully Join to Long Bar

1. Measure the Long Bar and cut to the size.

Calculate for long bar length : $\text{Gate Panel A Size} - 120\text{mm} = \text{Long Bar Size}$.**Inside View****6****PILLAR****LONG BAR**

Install the Arm motor bracket on Gate

Inside View**7**

Release Auto gate Bracket

PILLAR**LONG BAR**

Remark:

Position adjust by follow according Arm motor Length.

Inside View**8****PILLAR****Arm Motor****Inside View**

Install the Arm motor operator drive and small stopper.

Stopper Opening

Installation Complete



**click here to
watch VIDEO**